

Connection diagram

- Output plugs 1 - 3 can be used to connect the servos. Use the upper pins to connect the cables.
- The main battery or an external battery can be used to power the servo controller. I suggest a 3S-4S external battery.

